


BMW Mirror Mount P/N 3-21004

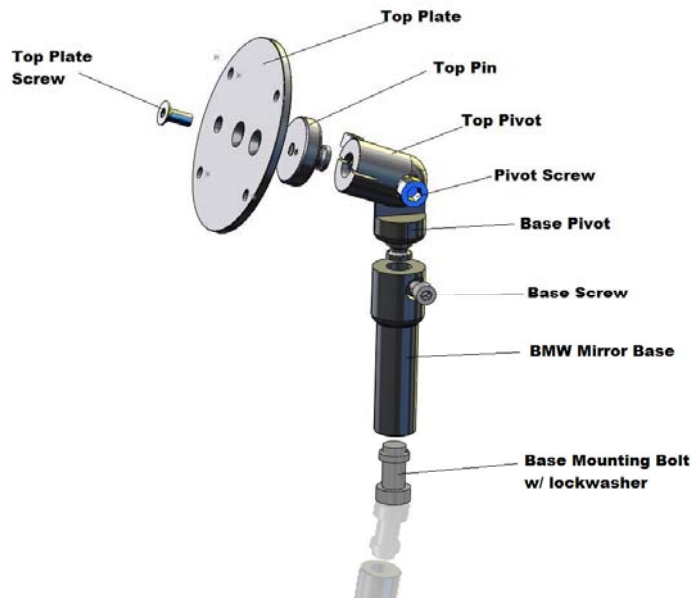

Instructions:

The mount is shipped assembled and ready to install. This mount system drops into one of the unused mirror mount holes on 2001 and later BMW handlebar control pods. Please follow the installation instructions carefully. The mount is fully assembled and ready to install. The four (4) small holes in the top plate are the AMPs pattern found on many electronic accessories. The single $\frac{1}{4}$ " (6mm) hole is used for mounting cameras with thumb screw mounting holes.

Step 1. Remove the **Base Mounting Bolt** and lock washer from the **BMW Mirror Base** using the supplied 6mm hex key. Install the mount from the top into the unused mirror mounting hole in the handlebar control assembly and re-install the bolt and lock washer from below the controls.

Step 2. Adjust the pivot angle by adjusting the **Pivot Screw** and adjust the rotation as needed by adjusting the **Base Screw**. To remove the entire upper section of the mount. Remove the **Base Screw** and lift straight out.

Step 3. The mount has a rotating top plate that can be installed either of the two mounting holes in the top plate. This allows for more flexibility in offset mounting. Decide if the top plate is mounted in a suitable mounting hole. If not remove the **Top Plate Screw** that holds it in place and re-install as necessary. Make sure the small pin in the top plate locates into the counter rotation hole in the **Top Pin**. To rotate the top plate assembly, loosen the **Top Pin Screw** and rotate the top plate to the desired position.

Step 5. With the mount secure, now install the device onto the top plate.

Note: The maximum weight of your mounted device should not exceed 2 lbs. (1 k). Remember to snug all fasteners prior to riding.

High Gear Specialties, Inc. / www.techmounts.com
940 W. Oakland Ave. , Suite A10
Oakland, FL 34787
Toll -Free 1 866 341-4192
Fax 1 407 656-3799